


Lotus Elise	B.H.P. and Torque figures at the wheels						
	Standard		Stage 1		Stage 2		
	B.H.P	Torque	B.H.P.	Torque	B.H.P.	Torque	
Revs							
3000	61	54	66	57	83	58	
3500	66	51	74	58	70	55	
4000	76	52	84	55	82	56	
4500	84	52	94	55	95	57	
5000	91	50	102	50	107		
5500	95.3		110		116		
6000	90		110		120		
6500	86		106		122		
7000					110		

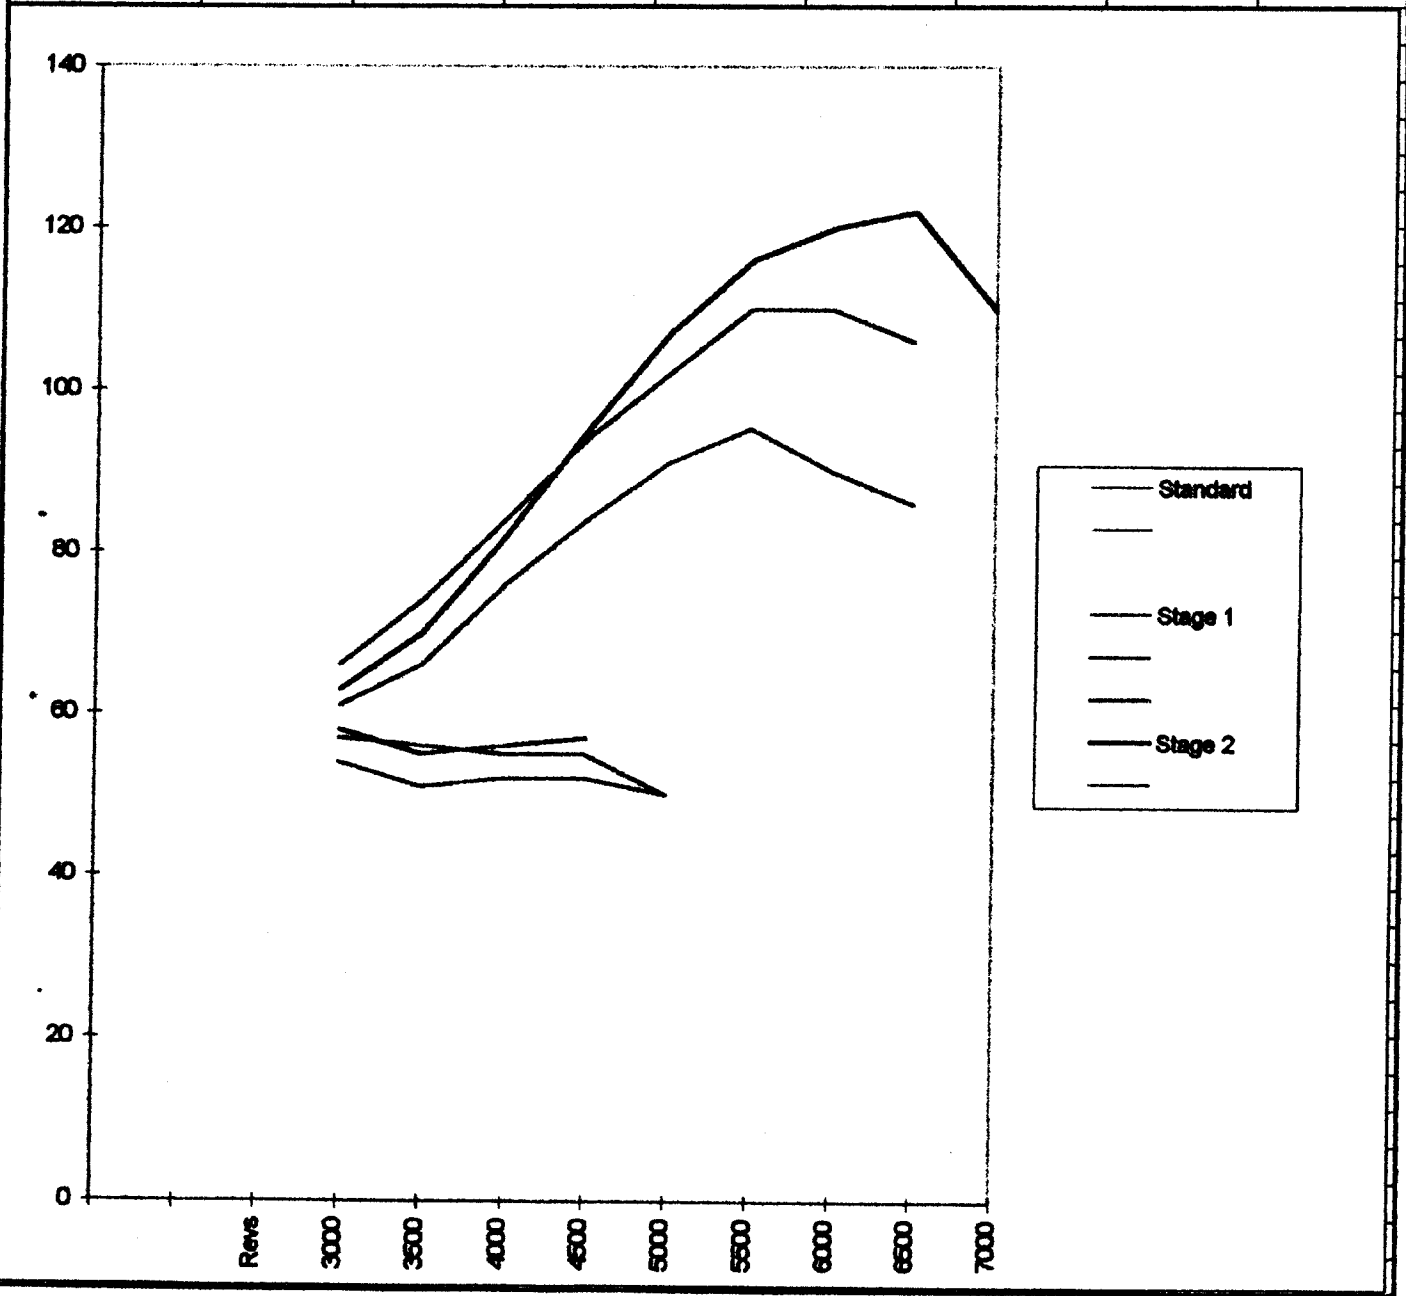

LAD LOTUS ELISE 160BHP